

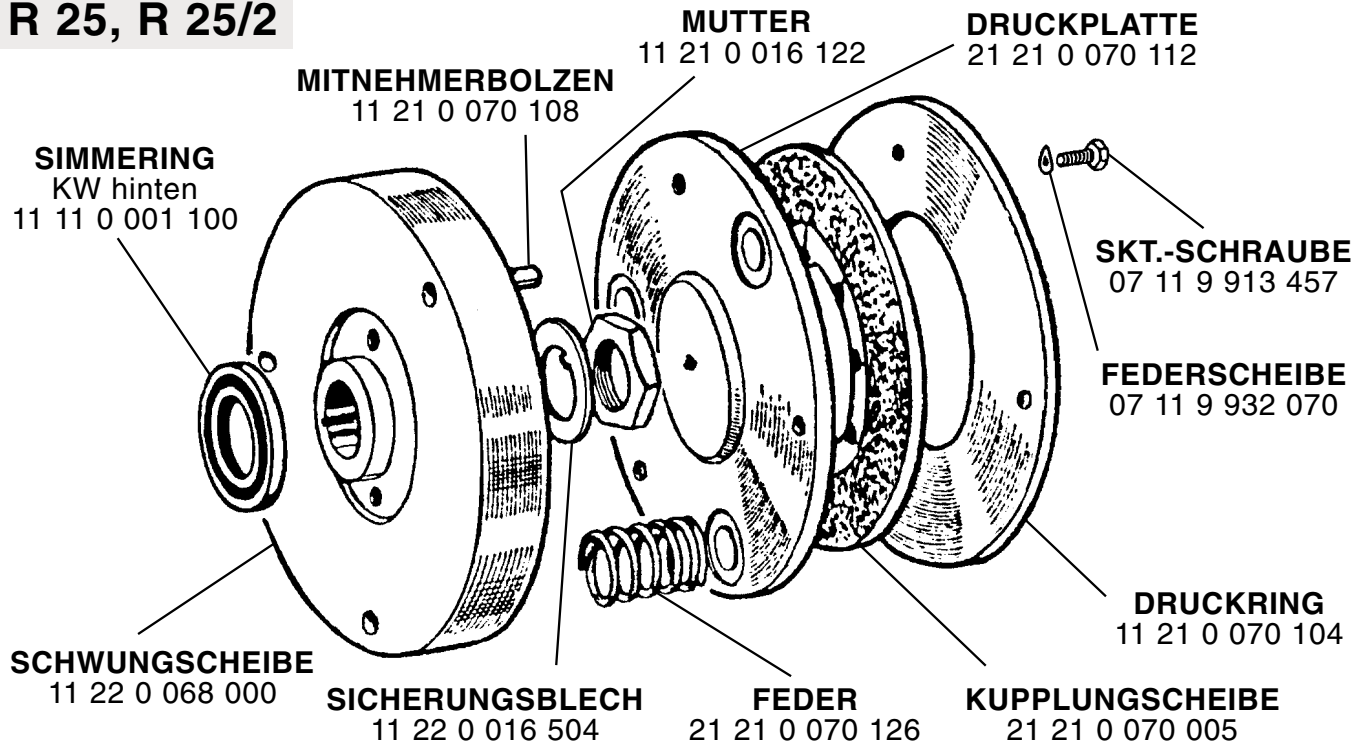


BMW R 25, R 25/2, R 25/3

R 25, R 25/2

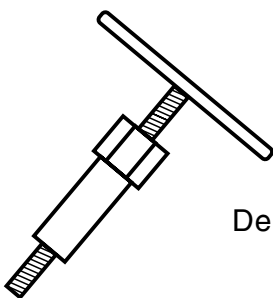

R 25/3

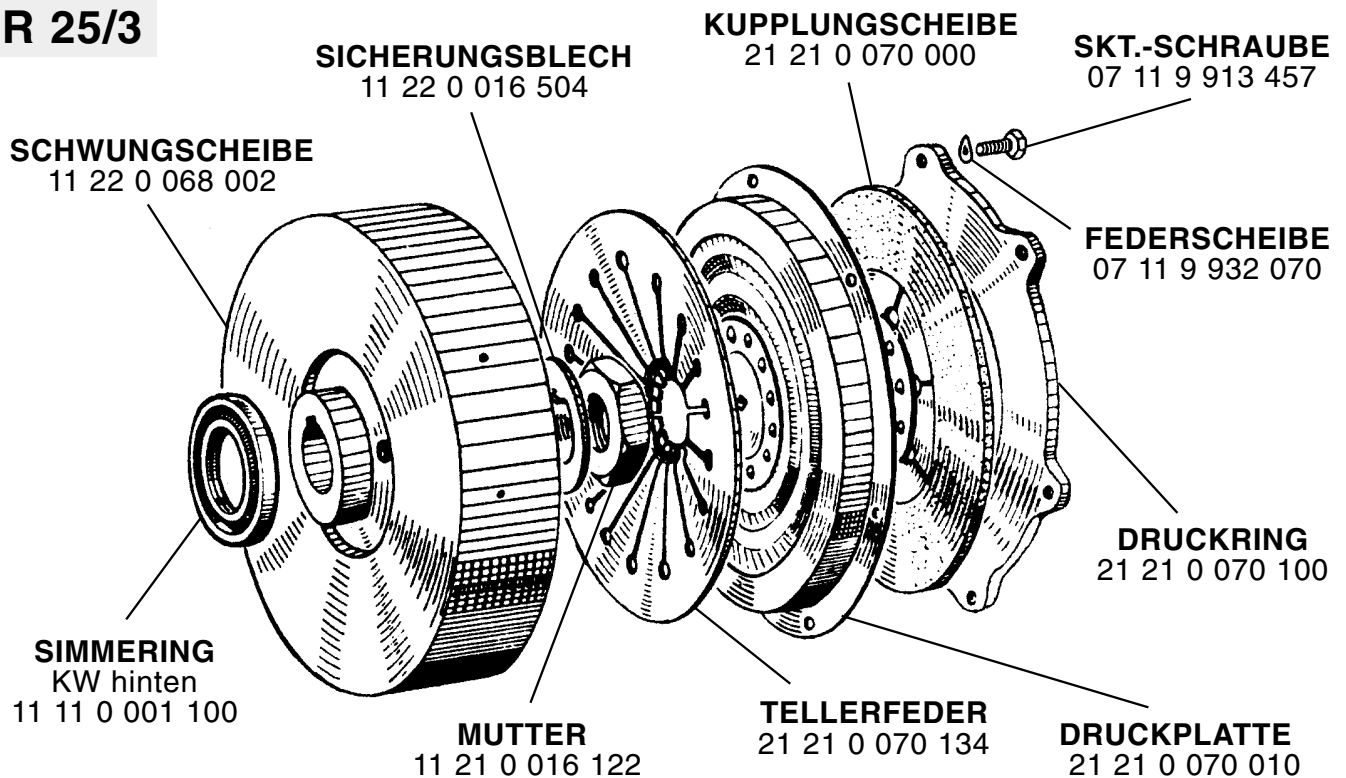

SPANNSCHRAUBEN
(3-er-Satz) zur
De- + Montage der Druckscheibe
00 00 0 000 240

ZENTRIERDORN
für Kupplungsscheibe
00 00 0 000 241

